



AEO_MSEI Micro Smart Energy Illuminator



Firmware Version : 1.24

Quick Start

A This device is a Z-Wave Actuator.

Single click the button located near the Status Indication LED or alternatively press quickly 6 times the external switch/button control to include or exclude the device. If the Aeon Labs Micro Illuminator is not included into any Z-Wave network, the LED will be blinking slowly continually.

Please refer to the chapters below for detailed information about all aspects of the products usage.


Product description

The Aeon Labs Micro Illuminator is a Z-Wave light dimmer specifically used to enable Z-Wave commands and control (on/off/dim) for existing in-wall dimmers. Additionally the device can report wattage energy usage or kWh energy usage to a Z-Wave gateway or controller. The wireless module is powered from the mains supply and is a three-wire design which requires a neutral connection. In the event of power failure, non-volatile memory retains all programmed information relating to the units operating status.

Installation Guidelines

The device is a 3 wire design which requires a neutral connection. The module is powered from the main supply.

The schematics below show how to wire the actuator. The power supply and the appliance are connected by the Load, Power Input and Neutral connectors. The 3.3 Volt and External Switch connectors are for external switching.

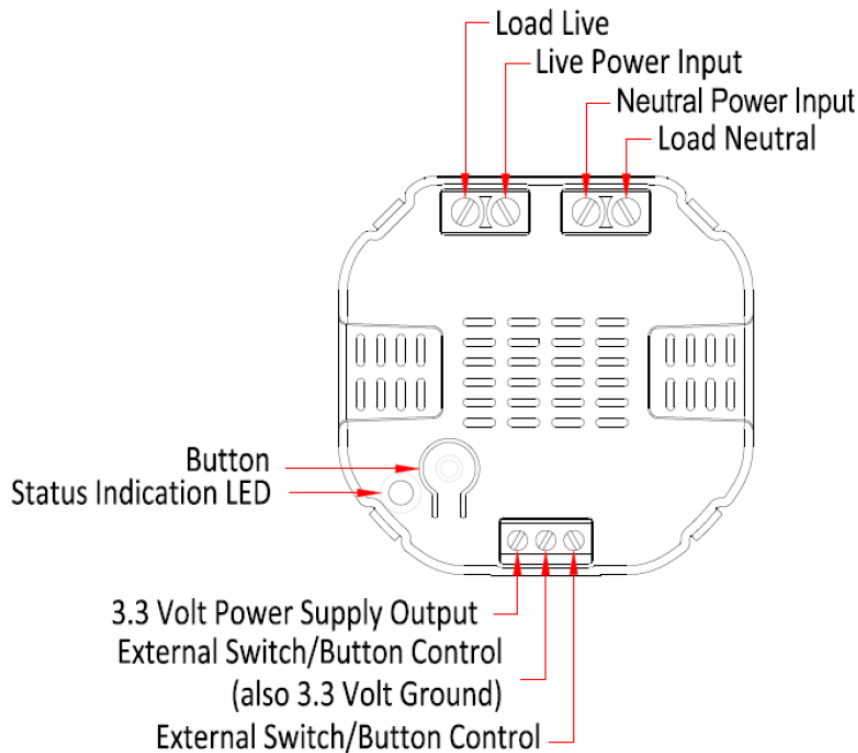

After the electrical installation the device has to be implemented in the Z-Wave Network.

Behavior within the Z-Wave network

I On factory default the device does not belong to any Z-Wave network. The device needs to join an existing wireless network to communicate with the devices of this network. This process is called **Inclusion**. Devices can also leave a network. This process is called **Exclusion**. Both processes are initiated by the primary controller of the Z-Wave network. This controller will be turned into exclusion respective inclusion mode. Please refer to your primary controllers manual on how to turn your controller into inclusion or exclusion mode. Only if the primary controller is in inclusion or exclusion mode, this device can join or leave the network. Leaving the network - i.e. being excluded - sets the device back to factory default.

If the device already belongs to a network, follow the exclusion process before including it in your network. Otherwise inclusion of this device will fail. If the controller being included was a primary controller, it has to be reset first.

To include the Aeon Labs Micro Illuminator with your Z-Wave controller simple bring it in the inclusion mode and click the Inclusion/Exclusion button at the Aeon Labs Micro Illuminator once. Alternatively you can use the external switch by quickly pressing it six times. If the Aeon Labs Micro Illuminator was successfully included to a Z-Wave network, the Status Indication LED will either be solid on or off (depending on if the switch is on or off) 10 seconds after the button was last pressed.

Operating the device

The dimmer is operated by an external switch/button or wireless. The click on the switch sets the dimmer on or off. To have the dimming function simple hold the button pushed until your desired level. The dimmer insert memorizes the last lighting level and switches automatically to the same level.

The Aeon Labs Micro Smart Energy Illuminator can report wattage energy usage or kWh energy usage to a Z-Wave gateway or controller when requested. If this function is supported by the gateway/controller, the energy consumption will be displayed in the user interface of the gateway/controller. Please consult the operation manual for these gateways/controllers for specific instructions.

Node Information Frame

NI The Node Information Frame is the business card of a Z-Wave device. It contains information about the device type and the technical capabilities. The inclusion and exclusion of the device is confirmed by sending out a Node Information Frame. Beside this it may be needed for certain network operations to send out a Node Information Frame.

A single click at the Inclusion/Exclusion switch sends a Node Information Frame.

LED Control

The LED on the Micro Illuminator will blink if it is currently not paired into a Z-Wave network. If the Aeon Labs Micro Illuminator was successfully included to a Z-Wave network, the Status Indication LED will either be solid on or off (depending on if the switch is on or off) 10 seconds after the button was pressed.

Associations

A Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called *association*. In order to control a different device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called **association groups** and they are always related to certain events (e.g. button pressed, sensor triggers, ...). In case the event happens all devices stored in the respective association group will receive a common wireless command.

Association Groups:

1	Status Reports (max. nodes in group: 5)
---	---

Configuration Parameters

Z-Wave products are supposed to work out of the box after inclusion, however certain configuration can adapt the function better to user needs or unlock further enhanced features.

IMPORTANT: Controllers may only allow to configure signed values. In order to set values in the range 128 ... 255 the value sent in the application shall be the desired value minus 256. For example: to set a parameter to 200? it may be needed to set a value of 200 minus 256 = minus 56. In case of two byte value the same logic applies: Values greater than 32768 may needed to be given as negative values too.

Type of Sensor Report (Parameter Number 1, Parameter Size 1) Defines the value type to be sent as Sensor Report.

Value	Description
0	Power (Default)
1	Voltage

Blinking Behavior (Parameter Number 2, Parameter Size 2) This is a double byte value. The LSB defines the total time the device need to blink. The value if set in seconds. The MSB defines the on/off interval of the blinking. The unit is 0.1 s.

Value	Description
0 — 65535	Configuration Bytes (Default 0)

Notification on Status Change (Parameter Number 80, Parameter Size 1) Defines the automated status notification of an associated device when status changes

Value	Description
0	Deactivated (Default)
1	Hail sent
2	BASIC Report Sent

Disables Function of automated sending of a Report triggered by minimal change of value.
(Parameter Number 90, Parameter Size 1)

Value	Description
0	Disabled (Default)
1	Enabled

Minimum Change to send Report (Watt) (Parameter Number 91, Parameter Size 2) The value represents the minimum change in Wattage for a Report to be sent .

Value	Description
0 — 32000	W (Default 50)

Minimum Change to send Report (%) (Parameter Number 92, Parameter Size 1) The value represents the minimum change in Watage Percent for a report to be sent

Value	Description
0 — 255	% (Default 10)

Report type send in Reporting Group 1 (Parameter Number 101, Parameter Size 4) Defines the type of report sent for the Reporting Group 1.

Value	Description
2	MultiSensor Report
4	Meter Report for Watt
8	Meter Report for kWh (Default)

Report Type send in Reporting Group 2 (Parameter Number 102, Parameter Size 4) Defines the type of report sent for the Reporting Group 2.

Value	Description
2	MultiSensor Report
4	Meter Report for Watt
8	Meter Report for kWh

Report Type send in Reporting Group 3 (Parameter Number 103, Parameter Size 4) Defines the type of report sent for the Reporting Group 3.

Value	Description
2	MultiSensor Report
4	Meter Report for Watt
8	Meter Report for kWh

Send Interval for Reporting Group 1 (Parameter Number 111, Parameter Size 4) Defines the time interval when the defined report of Reporting Group 1 is sent out.

Value	Description
0 — 65535	Interval (Default 720)

Send Interval for Reporting Group 2 (Parameter Number 112, Parameter Size 4) Defines the time interval when the defined report of Reporting Group 2 is sent out.

Value	Description
0 — 65535	Interval (Default 720)

Send Interval for Reporting Group 3 (Parameter Number 113, Parameter Size 4) Defines the time interval when the defined report of Reporting Group 3 is sent out.

Value	Description
0 — 32000	Interval

Technical Data

Explorer Frame Support	No
SDK	5.02 pl3
Device Type	Slave with routing capabilities
Generic Device Class	Multilevel Switch
Specific Device Class	Multilevel Power Switch
Routing	Yes
FLiRS	No
Firmware Version	1.24